


Installation Instructions for STE4000 & STE4500

When connecting to a steam line

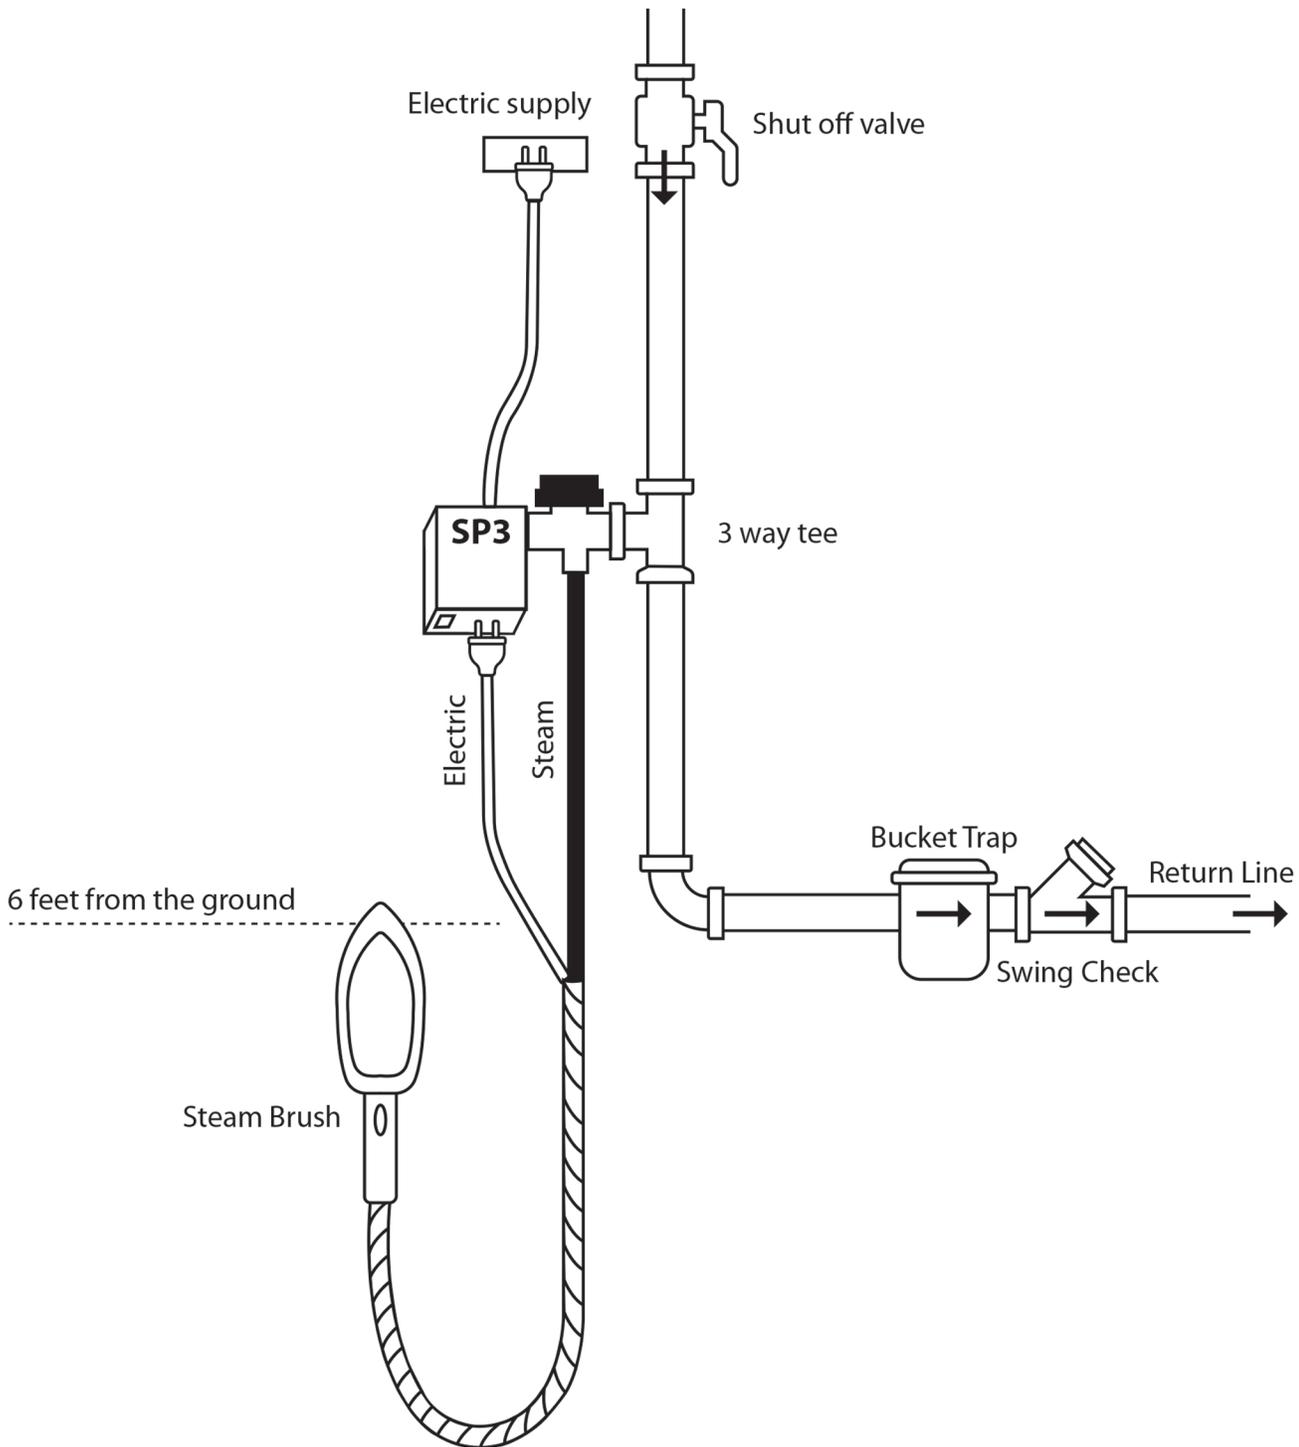

If you have any questions, please call us.