



FABRIC SHAVER

INSTRUCTION BOOKLET

Please read all instructions carefully before using this item.

Item# BH-14

BEFORE YOU START

- Use this Fabric Shaver only as recommended in this manual.
- Use this Fabric Shaver on fabric only; it is not to be used on skin, hair or any other material.
- This Fabric Shaver is equipped with a sharp cutting blade. Do not leave it unattended.
- Not to be operated by children.
- Tuck in any loose threads before shaving.
- Do not use this Fabric Shaver on delicate, easily damaged fabrics. If unsure, test the fabric first on an unexposed area.
- Do not let this Fabric Shaver come into contact with water.

1

COMPONENTS

1. Shaving Head
2. On/Off Switch
3. Removable Lint Collector
4. Comfort Grip Handle
5. Battery Compartment
6. DC Socket
7. AC Adapter
8. Replacement Blades
9. Cleaning Brush



2

PREPARATIONS FOR USE

1. To use with AC adapter, plug one end into the DC socket on your Fabric Shaver, and the other end into an electrical outlet.
2. To use with batteries, pull out the removable lint collector to expose the battery compartment. Open the cover of the compartment via the clip on the left hand side. Install 4 “C” batteries as indicated, close the compartment and clip the lint collector back into place.
3. Switch Fabric Shaver ON.

3

OPERATING INSTRUCTIONS

- Place fabric on a flat surface, such as an ironing board, and pull it as straight as possible.
- Tuck in any loose threads before shaving and test the fabric’s suitability on an unexposed area first.
- Gently glide the shaving head over the fabric in an up and down motion.
- Do not press down heavily in order to prevent possible damage to fabric.
- Empty the lint collector after each use.

4

CARE AND CLEANING

- Use a damp cloth to wipe the surface of your Fabric Shaver. Do not allow water or other liquid to enter the inner parts of this device.
- To clean the shaving head or blades, switch OFF and unplug your Fabric Shaver. Unscrew the shaving head and use the cleaning brush provided to remove any pilling or lint pieces. Screw the shaving head back on. Blades are sharp! Please use caution.
- To replace the blades, switch OFF and unplug your Fabric Shaver. Unscrew the shaving head, carefully remove the shaving blades and insert the replacement set. Then screw the shaving head back on. Blades are sharp! Please use caution.
- Remove the batteries if your Fabric Shaver will not be used for a long period of time.

5