

⚠ IMPORTANT

Do not connect the wires by the color as each iron manufacturer uses different color coding for their wires.

4- Insert each wire to the correct terminal as indicated on step 3 (fig.3) and tighten the *wire clamping screw* to hold the wire in place.

- | | |
|----------------------|---------------|
| a. Power (Hot +) | to terminal 1 |
| b. Power (Neutral -) | to terminal 2 |
| c. Solenoid Valve | to terminal 3 |
| d. Ground | to Ground |



Fig.4

5- Verify all wires are securely connected to the corresponding terminal and then fold them back.

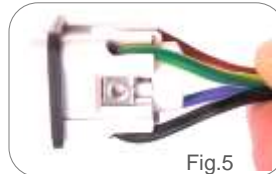


Fig.5

6- Re-assemble the plug and lock the housing with the cover *top screw*. Hold the cover and tighten the rear *end cover* to lock power cord in place.



Fig.6

7- Plug in the assembled *male 4P plug* to the *SP3 unit* and secure the connection with the *female plug lock*.

Limited Warranty

The Höt-Steam® SP3 Steam Regulator is tested and inspected before leaving our factory. We warrant to the original user of this product that it will be free from defects in material and workmanship for 90 days from date of purchase.

In no way will the manufacturer of the Höt-Steam® SP3 Steam Regulator be responsible for any incidental or consequential damage caused by the steam regulator. Any liability is limited solely to the repair or replacement of the part or product, excluding any labor or any other cost to remove or install said part or product.

This warranty is contingent upon installation and use of equipment under normal operating conditions. This warranty is void on steam regulators and parts that have been subject to misuse, accident, or negligent damage.

HÖT-STEAM®

97 Sherwood Ave, Farmingdale NY 11735
Tel: (631) 393-2811 Fax: (631) 393-2810
www.hot-steam.com

HÖT-STEAM®

SP3 Steam Regulator

Installation Manual

Model No.

SP3-110

SP3-220



IMPORTANT

- Please read this owner's manual thoroughly before installing and operating your iron.
- Please retain this owner's manual for future reference after reading it thoroughly.

SP3

STEAM REGULATOR

Thank you for purchasing the Höt-Steam® *SP3 Steam Regulator*. The Höt-Steam® *SP3 Steam Regulator* replaces your current solenoid valve that is used with an electric steam iron. Please read the installation and wiring instructions before operating this unit.


SP3 INSTALLATION & CONNECTING

IMPORTANT

Be sure to unplug the power supply source of the regulator and to close the steam supply line.

How to install the SP3

- 1- Remove the old solenoid valve from the steam supply line
- 2- Install the *SP3* on the steam supply line
- 3- Connect the iron's steam hose to the *SP3 hose fitting*
- 4- Plug in the iron *male 4P plug* to the *SP3 female 4P plug* (See additional instructions)
- 5- Plug in the power cord and turn on the power switch
- 6- Adjust the steam volume by turning the *valve knob*

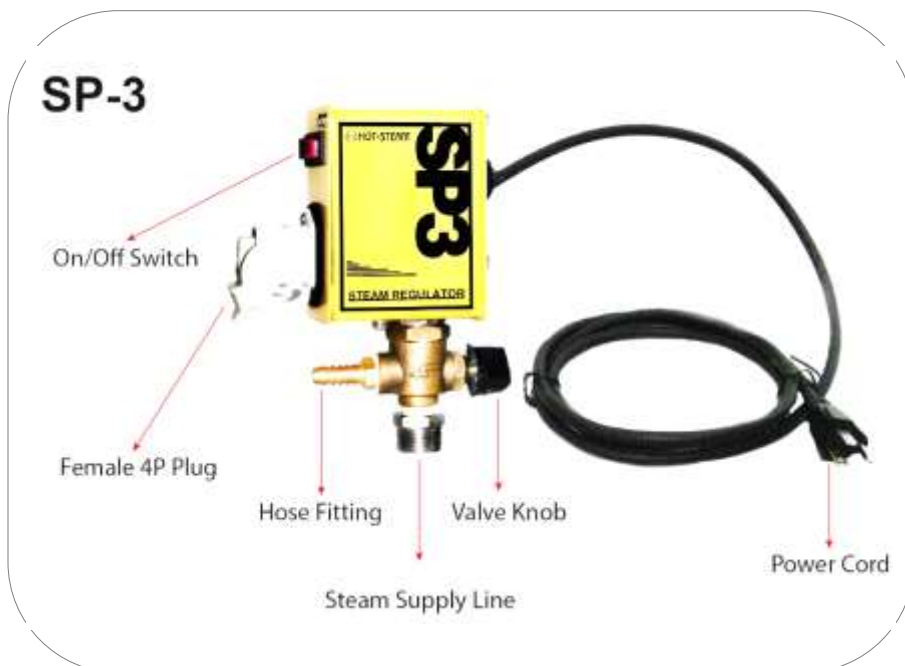

4P MALE PLUG WIRING

IMPORTANT

This wiring instruction should be only used when connecting to a Hot-Steam® *SP3 Steam Regulator*

In order to properly connect the iron according to the *SP3* wiring specifications, it is important to identify each of the 4 wires from the iron's power cord.
(Consult the iron's manufacturer manual for additional wiring instructions if needed).

WIRING STEPS

- 1- Remove the *top screw* and detach the *outer cover* of the plug.



- 2- Insert the iron's power cord through the rear end of the cover and arrange the wires as shown on picture.



- 3- The inner component of the *male 4P plug* contains 4 *wire clamping screws* on the back, each terminal numbered 1, 2, 3 and Ground. Identify each of the 4 wires from the iron's power cord to begin connecting (Consult the iron's manufacturer manual to identify the wires).

